

Thank you very much for choosing quality cookware from GSW. To ensure that cooking experience, please read the care and maintenance instructions carefully.

Ⓒ CARE AND MAINTENANCE INSTRUCTIONS - IRON- FREE

- Prior to first usage: Remove the attached oil protection/leakage protection.
- Completely remove any stickers.

For any residue, even small impurities may leave scratch marks on the glass-ceramic hob. Do not use water to extinguish burning fat. Instead use a blanket or a suitable fire extinguisher. Do not heat the cookware for extended periods when it is empty.- **CAUTION!** Handles will become hot. Please use oven gloves.
- Place cookware on suitable protective mats. To protect table covers and tables.
- Never allow small children to play near hot cookware unattended.
- Please note: GSW is not responsible for damage that occurs as a result of not observing the care and maintenance instructions. A right of recourse is therefore excluded.

• Prior to every usage, please check the base of the cookware and the glass-ceramic hob for any residue. Even small impurities may leave scratch marks on the glass-ceramic hob. Do not use water to extinguish burning fat. Instead use a blanket or a suitable fire extinguisher. Do not heat the cookware for extended periods when it is empty.- **CAUTION!** Handles will become hot. Please use oven gloves.
- Place cookware on suitable protective mats. To protect table covers and tables.
- Never allow small children to play near hot cookware unattended.
- Please note: GSW is not responsible for damage that occurs as a result of not observing the care and maintenance instructions. A right of recourse is therefore excluded.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

GSW Gäns Stahlwaren GmbH
Gewerbegebiet 2
55595 Spabrücken
GERMANY / ALLEMAGNE
Tel. 0049 (0) 6706-9304-14
Fax 0049 (0) 6706-9304-22
service@gsw-stahlwaren.de
www.gsw-stahlwaren.de

Vielen Dank, dass Sie sich für ein Qualitäts-Kochgeschirr aus dem Hause GSW entschieden haben. Damit Sie lange „Spaß“ am Kochen haben, lesen Sie bitte die Gebrauchs- und Pflegehinweise aufmerksam durch.

D GEBRAUCHS- UND PFLEGEHINWEISE -EISEN-

- Eventuell vorhandene Aufkleber komplett entfernen.
- Vor dem ersten Gebrauch: Den aufgebrauchten Ölschutz/ Korrosionsschutz entfernen. Dazu das Kochgeschirr in einem Behälter mit heißem Wasser gründlich einweichen. Spülmittel hinzugeben und mit einer Spülbürste die Schutzfilmreste gut abbürsten. Danach müssen Sie das Kochgeschirr gut abspülen und abtrocknen. Anschließend Ihr Kochgeschirr mit Fett/Öl und reichlich Salz bestreuten Kartoffelschalen oder -scheiben befüllen und 2–3 Min. scharf anbraten. Den Inhalt dann ausschütten und das Kochgeschirr nochmals mit Fett/Öl kurz erhitzen. Jetzt ist das Kochgeschirr gebrauchsfertig.
- Beim Gebrauch: Kochgeschirr erhitzen, anschließend Fett/Öl hineingeben. In das erhitzte Fett/Öl das Bratgut hineingeben und die Energiezufuhr reduzieren.
- Zu Ölen und Fetten ist generell zu sagen: Butter und Margarine sollten Sie nur bis 160 °C verwenden. Inhaltsstoffe wie Wasser, Salz und Milcheiweiß verbrennen schnell und beeinträchtigen dann auch den Geschmack Ihrer Speisen.
- **GSW-Empfehlung:** Öle, normale Fette und Butterschmalz enthalten kein Wasser und keine Zusatzstoffe. Sie können bis 220 °C erhitzt werden. Zum scharfen Anbraten bis 280 °C sind gehärtete Pflanzenfette geeignet.
- Nach dem Gebrauch: Kochgeschirr mit Küchenpapier ausreiben und bei Bedarf mit heißem Wasser ausspülen und wieder einölen. Korrosionshemmende Patina bildet sich nach mehreren Bratvorgängen.
- Nie in der Spülmaschine reinigen!
- Pflanze kann bei längerem Kontakt mit Wasser rosten.
- Die Verwendung von säurehaltigen Lebensmitteln ist zu vermeiden.

BEI NUTZUNG AUF INDUKTIONSKOCHFELDERN

- **ACHTUNG!** Hohe Aufheizgeschwindigkeit, Kochgeschirr beim Vorheizen nicht überhitzen. Sollte es doch zu einer Überhitzung kommen, lüften Sie bitte den Raum ausreichend.
- Unter bestimmten Umständen kann ein Geräusch auftreten, das auf die elektromagnetische Eigenschaft der Heizquelle und des Kochgeschirrs zurückzuführen ist. Dies ist völlig normal und nicht auf einen Defekt Ihres Induktionsfeldes oder des Kochgeschirrs zurückzuführen.
- Das Kochgeschirr ist mittig auf dem Induktionsfeld anzuordnen.
 - Nach dem Kochen nicht sofort auf die Glaskeramikfläche fassen, da die Kochzone durch Rückwärme des Kochgeschirrbodens heiß wird. Halten Sie Kinder grundsätzlich fern.
 - Kochgeschirrdurchmesser: Induktionswirksamer Bodendurchmesser:

ca. 20,0 cm	ca. 14,5 cm
ca. 24,0 cm	ca. 17,0 cm
ca. 28,0 cm	ca. 21,0 cm
ca. 32,0 cm	ca. 23,5 cm

Thank you very much for choosing quality cookware from GSW. To ensure that cooking experience, please read the care and maintenance instructions carefully.

Ⓒ CARE AND MAINTENANCE INSTRUCTIONS - IRON- FREE

- Prior to first usage: Remove the attached oil protection/leakage protection.
- Completely remove any stickers.

For any residue, even small impurities may leave scratch marks on the glass-ceramic hob. Do not use water to extinguish burning fat. Instead use a blanket or a suitable fire extinguisher. Do not heat the cookware for extended periods when it is empty.- **CAUTION!** Handles will become hot. Please use oven gloves.
- Place cookware on suitable protective mats. To protect table covers and tables.
- Never allow small children to play near hot cookware unattended.
- Please note: GSW is not responsible for damage that occurs as a result of not observing the care and maintenance instructions. A right of recourse is therefore excluded.

• Prior to every usage, please check the base of the cookware and the glass-ceramic hob for any residue. Even small impurities may leave scratch marks on the glass-ceramic hob. Do not use water to extinguish burning fat. Instead use a blanket or a suitable fire extinguisher. Do not heat the cookware for extended periods when it is empty.- **CAUTION!** Handles will become hot. Please use oven gloves.
- Place cookware on suitable protective mats. To protect table covers and tables.
- Never allow small children to play near hot cookware unattended.
- Please note: GSW is not responsible for damage that occurs as a result of not observing the care and maintenance instructions. A right of recourse is therefore excluded.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.

• Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use. • Please note: GSW declines responsibility for damages resulting from non-respect of the notice of use.